


For F1HD look at Julian webiste <http://ukradio.info/GT-XDR/>
It's the same plugs for SDA SCL and GND wires.

For S3HD you need to dismantel all the box !!!
pics soon.

- If you use external power suply 5v to 12v verify you have change power supply switch on the seeeduino board.
- I have soldered 3 wires on the seeeduino board: blue for SCL; orange for SDA, brown for Ground .

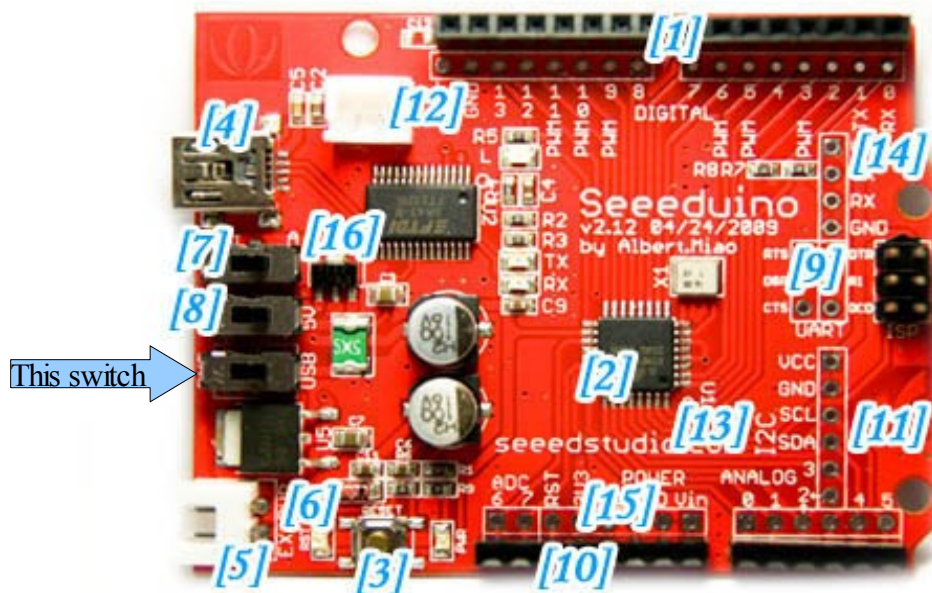

To have pi code , smeter and smax information in your computer you need to install arduino driver.
Many operating system are supported (windows,mac,linux)
look here to have infos to install it. <http://arduino.cc/en/Main/Software>
After driver installed you can use arduino software to show informations or use a simple terminal.

To use the python software you need to install driver under Linux for this moment.
Ask me to get source code of logger software.